

# How to Use Your Seat Belt System - Komfort Latch®



BRINGING SAFETY TO PEOPLE™

## How to adjust seat belt height for additional comfort

If your seat belt is uncomfortable (for example, rubs against your neck), then follow the three steps below to move the Seat Belt Height Adjuster to the appropriate height.

**Note:** Before adjusting seat belt height, adjust seat to the proper position.




1. Pinch top and bottom levers together as you move the shoulder loop to the correct height as shown in **Fig. 1**.
2. Move shoulder loop until it clicks into a locked position. (**Fig. 2**).
3. Gently tug on the shoulder belt to make sure height adjuster is locked.

## Komfort Latch®

The continuous movement of the seat during driving can cause uncomfortable rubbing of the seat belt against the neck or pressure to your shoulder. To relieve the seat belt tension, limited slack can be added to belt by using the Komfort Latch.

1. Release Komfort Latch lever by pulling down.
2. Properly adjust the seat belt height adjuster.
3. Pull the shoulder belt a small distance away from your chest. Pull out only enough webbing so you can insert two fingers (approximately 1" or 2.5 cm) between the shoulder belt and your chest, as shown in **Fig. 3**.
4. With your other hand lift up the Komfort Latch lever until it secures web (**Fig. 4**).
5. **To unlock:** Lean forward in seat, pulling on the shoulder belt, or reach up and pull down the Komfort Latch lever. The Komfort Latch will disengage and allow the seat belt to retract.
6. Never perform this operation while the truck is in motion.

**Note:** Always disengage Komfort Latch when removing seat belt. This will allow the seat belt to fully retract.

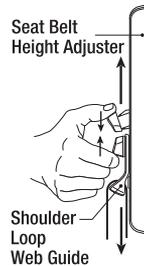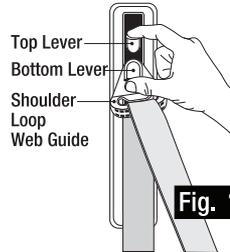

## WARNING

Using the seat belt with too much slack will reduce the effectiveness of the seat belt during a crash and could result in serious injury or death.